

Note:


This insulation section specifically applies only to "Twinskin" or double wall style cabins, not to single wall cabins.

What's Included vs. Not Included:

- » Insulation beams are included (size varies based on wall gap)
- » Insulation material is NOT included - you need to purchase this separately

Installation Details:

- » Insulation beams are placed every 600mm in each wall by default
- » All beams come at the same height, allowing the assembly crew to cut them to the needed height
- » Screws should penetrate about 15mm into the wall log thickness
- » Installation happens during wall assembly

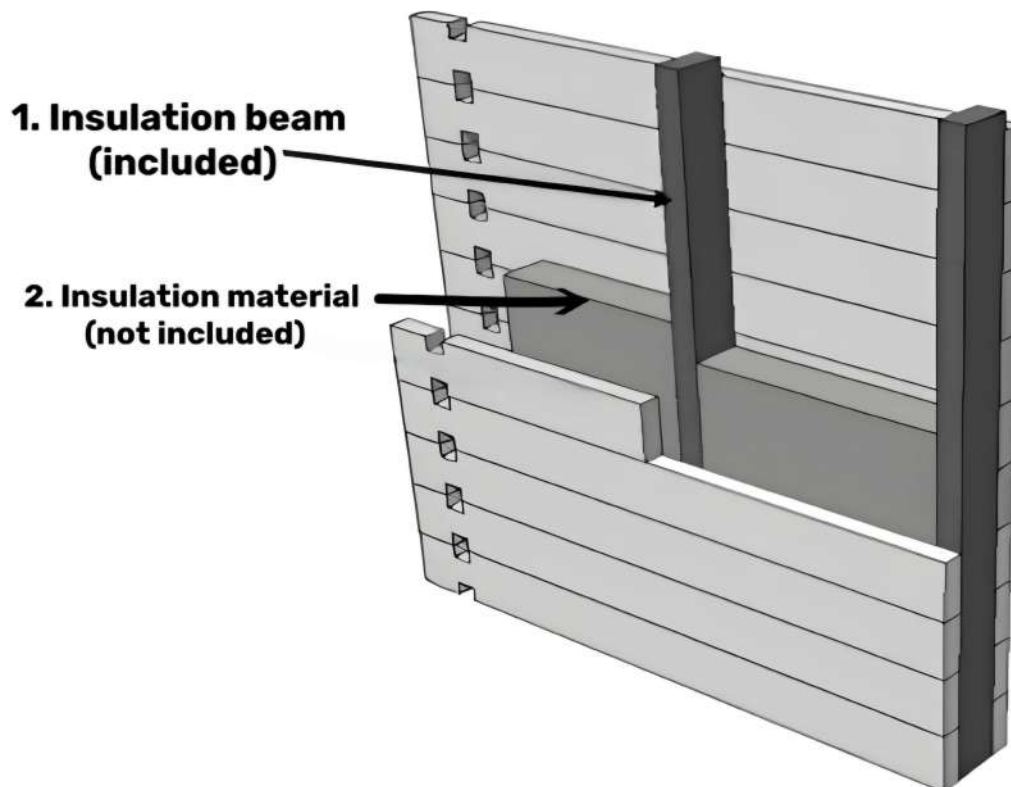

**Twinskin wall insulation – 1. Insulation beam (included), size according wall gap;
2. Insulation material (not included).**